


GM TH350, TH350C

Boost Valve Kit

Part No.

35754-01K

- Boost Sleeve
- Reverse & Modulator Boost Valve
- Intermediate Boost Valve

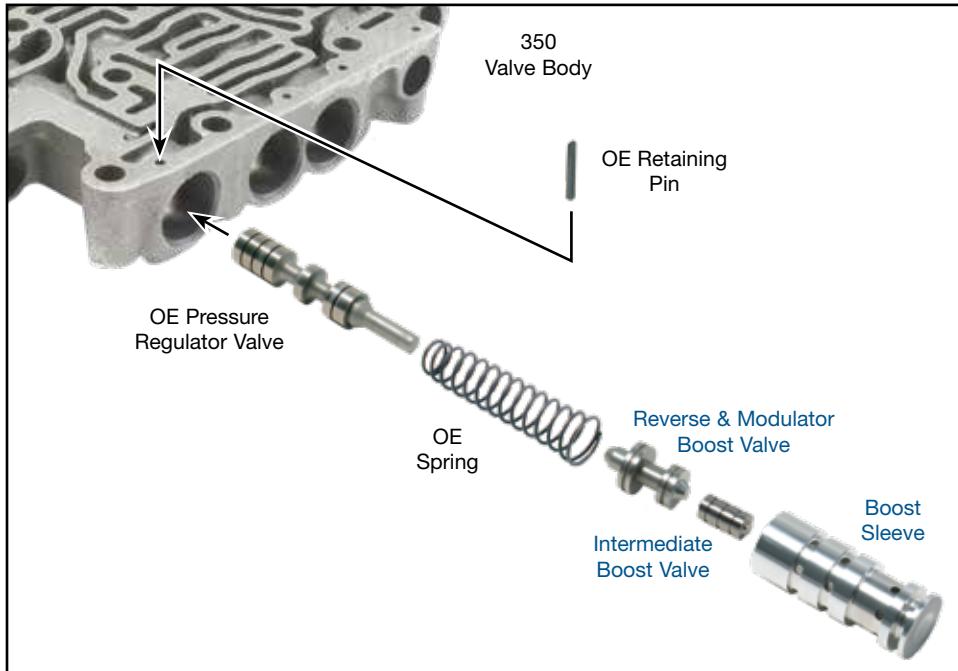

1. Disassembly

- Remove OE retaining pin and keep for reuse.
- Remove OE boost valve bore lineup.
- Discard OE sleeve, Reverse and modulator boost valve and Intermediate boost valve.
- Keep OE pressure regulator valve and spring for reuse.

2. Assembly

- Lubricate all pieces of Sonnax kit.
- Reassemble OE pressure regulator valve and spring and insert into bore.
- Install Sonnax Intermediate boost valve and Reverse and modulator boost valve into open end of boost valve sleeve.
- Carefully push assembly into bore only deep enough to reinstall OE retaining pin.